

CLEVERTOUCH®

by Boxlight®

Contents

Requirements..... 2

Steps..... 2

 
CleverLive for Windows Upgrade

Requirements



1. You will require either RDP (remote desktop protocol) access to the player or have a USB mouse connected to the player to perform the upgrade. When first setting up the Pro V4, you should have easy access to the device via a USB Mouse/Keyboard.


Steps

1. Boot up the Pro V4 and add it to the network, ensuring to provide unfettered internet access so the player connects to CleverLive (formally Sedaolive).
2. The final part of the Connection Wizard will reach a “final” set up page with a Pin code to connect the device to a CleverLive account- **DO NOT ACTION THIS STEP.**
3. There will be, below this Pin code, a clickable image/instruction to perform the upgrade – see below screenshot.

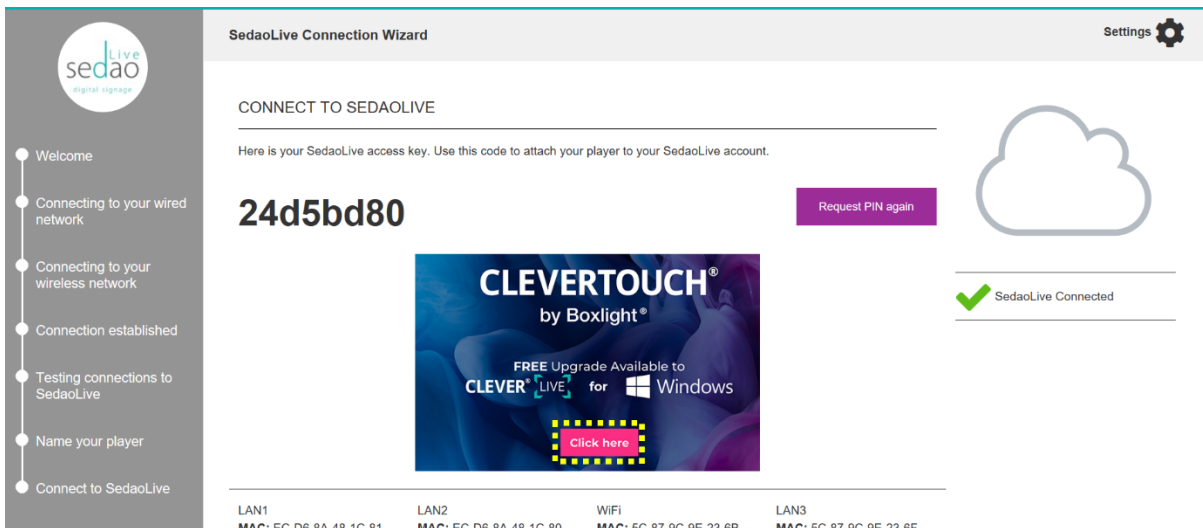

   4. Follow the click instructions and the player will remove Imageflyer/Content Publisher and install the new application – CleverLive for Windows.

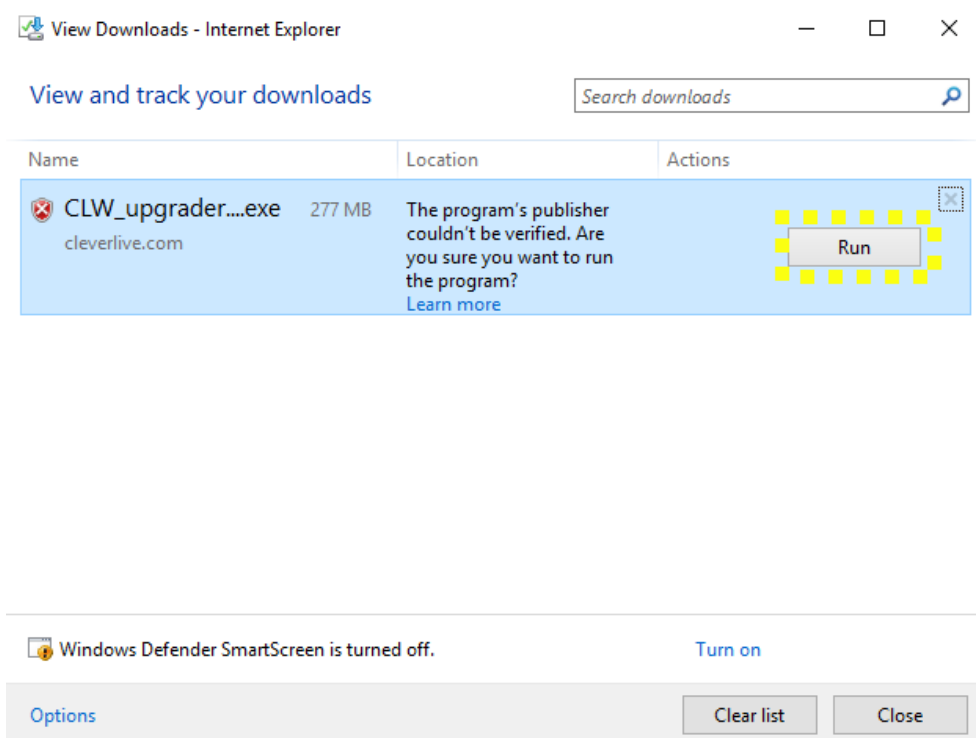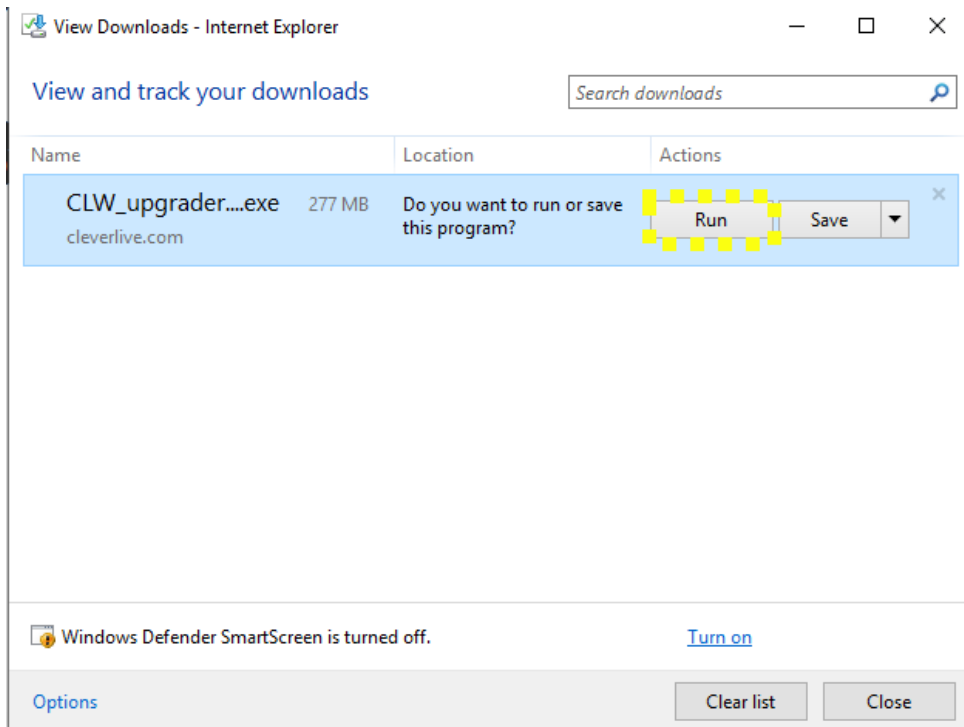

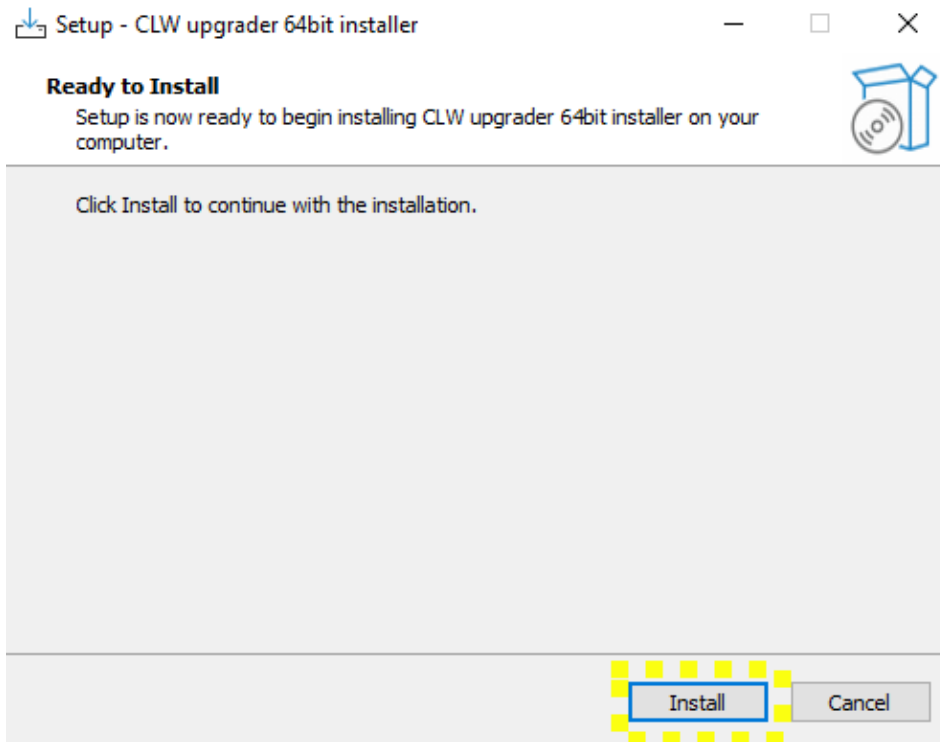

5. The player will the reboot.
6. CleverLive for Windows will auto launch once the device has rebooted and then a new splash screen and Pin code will appear which is used to connect to their CleverLive account.

